



LIST OF PARTS

1 Barrel	24 Safety Spring	47 Adjusting Screw (B)	69 Frame Screw, Rear
2 Rear Sight	25 Bolt Handle Catch Plate	48 Spring, Trigger Pull	70 Frame Screw, Front
3 Front Sight	26 Bolt Handle Catch Post	49 Adjusting Screw, Trigger Pull (A)	71 Magazine Shell
4 Front Sight Base	27 Bolt Stop	50 Locking Nut	72 Follower
5 Insert	28 Bolt Stop Spring	51 Adjusting Screw, Trigger Overtravel (C)	73 Magazine Spring
6 Screw	29 Bolt Stop Pin	52 Locking Nut	74 Magazine Base Lock
7 Spring Washer	30 Pin	53 Nylon Pin (2x)	75 Magazine Floor Base
8 Front Sight Detent	31 Ejector	54 Trigger Mechanism	76 Fore End Band
9 Detent Spring	32 Ejector Spring	55 Screw	77 Fore End Band Screw
10 Pin, Front Sight Detent	33 Sear	56 Spring Washer	78 Fore End Nut
11 Front Sight Cover	34 Sear Stop	57 Stock	79 Trigger Spring
12 Receiver	35 Sear Stop Spring	58 Butt Plate	
13 Bolt	36 Sear Pin	59 Butt Plate Screw (2x)	
14 Bolt Handle	37 Trigger Housing	60 Swivel Wood Screw	
15 Extractor	38 Trigger	61 Sling Swivel	
16 Extractor Collar	39 Trigger Lever	62 Swivel Screw	
17 Firing Pin	40 Trigger Pin	63 Swivel Washer	
18 Firing Pin Spring	41 -	64 Sling Swivel Assy	
19 Firing Pin Spring Retainer	42 Adjusting Screw, Set - Trigger	65 Trigger Guard	
20 Bolt Handle Catch	43 Set-Trigger Lever	66 Magazine Catch	
21 Bolt Sleeve	44 Set-Trigger Lever Spring	67 Magazine Catch Spring	
22 Pin, Firing Pin	45 Pin	68 Rear Spacer	
23 Safety	46 Retaining Ring (2x)		