



LIST OF PARTS

1	Frame *	31	Safety Detent Plunger Spring (2x)
2	Slide Stop	32	Magazine Catch
3	Slide Stop Spring	33	Magazine Catch Spring
4	Slide Stop Spring Pin	34	Trigger Bar Spring
5	Trigger	35	Magazine Catch Spring Screw
6	Trigger Pin	36	Magazine Body *
7	Trigger Bar	37	Magazine Base
8	Trigger Spring	38	Magazine Base Lock
9	Pin (3x)	39	Magazine Spring *
10	Ejector	40	Follower
11	Sear	41	Recoil Spring *
12	Sear Spring	42	Recoil Spring Guide *
13	Sear Pin	43	Barrel *
14	-	44	Slide *
15	-	45	Front Sight
16	Hammer	46	Front Sight Pin
17	Disconnecter	47	Loaded Chamber Indicator *
18	Hammer Pin	48	Loaded Chamber Indicator Spring *
19	Hammer Pin Retaining Peg	49	Loaded Chamber Indicator Nut *
20	Main Spring Strut	50	Extractor *
21	Main Spring	51	Extractor Pin
22	Main Spring Plug	52	Extractor Spring
23	Main Spring Plug Pin	53	Rear Sight
24	Magazine Guide	54	Firing Pin *
25	Magazine Guide Pin	55	Firing Pin Spring
26	Grip Panel - Left *	56	Firing Pin Stop *
27	Grip Panel - Right *	57	Securing screw (2x)
28	Grip Panel Screw (2x)	58	Safety - Right
29	Safety - Left *	59	Safety Detent Plunger - Right
30	Safety Detent Plunger - Left	60	Shaped Washer (2x)

Comments:

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.