



LIST OF PARTS

- | | |
|--------------------------------------|-------------------------------|
| 1 Barrel | 26 Return Spring Guide |
| 2 Front Sight Support | 27 Return Spring Cap |
| 3 Front Sight | 28 Trigger |
| 4 Muzzle Thread Cover | 29 Disconnecter |
| 5 Muzzle Thread Cover Lock w/ Spring | 30 - |
| 6 Piston Extension | 31 - |
| 7 Piston | 32 Striker Catch - Left |
| 8 Piston Spring | 33 Trigger Mechanism Retainer |
| 9 Rear Sight Leaf | 34 Trigger Unit Spring |
| 10 Rear Sight Slide | 35 Safety |
| 11 Receiver | 36 Trigger Guard |
| 12 Ejector | 37 Stock |
| 13 Breech Block Carrier | 38 Butt Plate |
| 14 Breech Block | 39 Butt Plate Screw |
| 15 Firing Pin | 40 Stock Screw |
| 16 Extractor | 41 Handguard |
| 17 Extractor Support | 42 Fore-end |
| 18 Extractor Spring | 43 Pistol Grip |
| 19 Breech Lock | 44 Pistol Grip Screw |
| 20 Striker-Hammer | 45 Magazine Shell |
| 21 Receiver Cover | 46 Follower |
| 22 Operating Spring Rod | 47 Follower Spring |
| 23 Operating Spring | 48 Magazine Floorplate |
| 24 Return Spring Rod | |
| 25 Return Spring | |